


BLOCK 1 FOR
MICRO SCALPELS

SAWCUT FOR
SNAPOFF BLADE
INSERT SHARP
EDGE DOWN


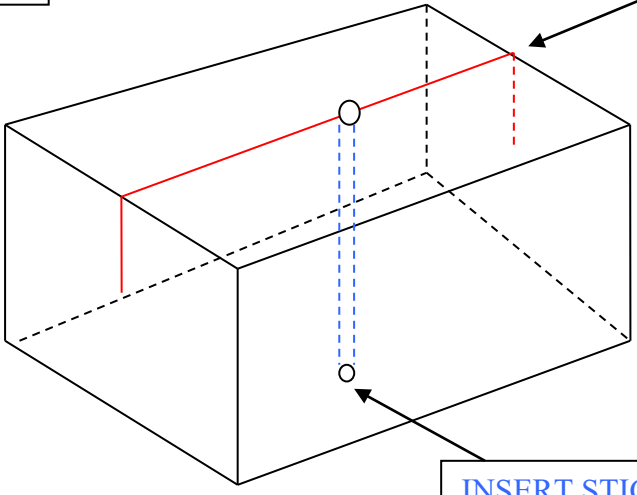


INSERT STICK
FROM BOTTOM
BEFORE BLADE
TO CUT SLOT

3

BLOCK 2 FOR
DRILLING HOLE
FOR NEEDLES

DRILL TO
COMPLETE
DEPTH IN 1mm
HOLE

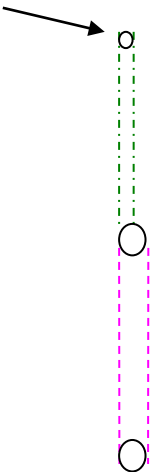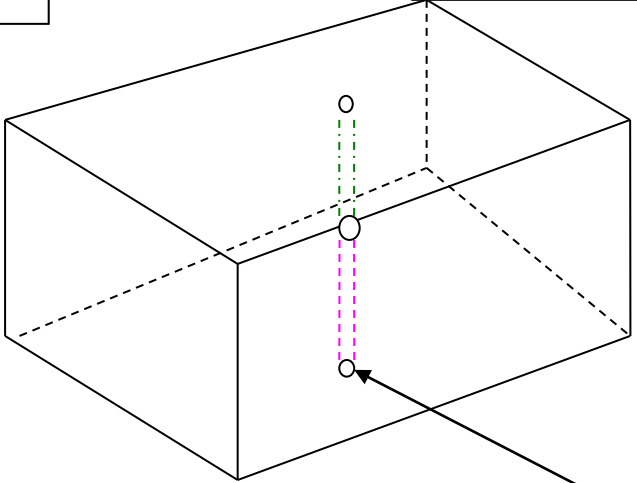

INSERT
BSTICK
IN 3mm
HOLE